



①本体とPCをインターフェースケーブルで接続する。



②電源を入れて「MENU」を押す











④「JOB選択」を選択して「Enter」





8

ESC

MENU



⑤データを抜き出したいJOBを選択して「Enter」







⑥選択したJOBが間違いない事を確認して「Enter」

更新日時	種類	サイズ	
(4)			
2015/04/24 18:14	Microsoft Excel	1 KB	
2005/03/11 0:00	Microsoft Excel	1 KB	
2005/06/06 6:06	アプリケーション	56 KB	
2014/10/15 20:03	アプリケーション	48 KB	
『きたファイル (1)			
2017/01/31 9:01	構成設定	1 KB	
	更新日時 2015/04/24 18:14 2005/03/11 0:00 2005/06/06 6:06 2014/10/15 20:03 きたファイル(1) 2017/01/31 9:01	更新日時 種類 2015/04/24 18:14 Microsoft Excel 2005/03/11 0:00 Microsoft Excel 2005/06/06 6:06 アプリケーション 2014/10/15 20:03 アプリケーション *きたファイル(1) 2017/01/31 9:01 構成設定	

⑦「SDL TOOL」を起動する。



⑨「Start」をクリックする。





⑩機械の「Yes」を選択して「Enter」



①データの送信が始まります。

ポート番号: COM11 👤	受信開始
通信速度: 1200 bps  ▼	
受信データの保存先: デスクトップ ▼	
完了しました。	

## 12データの送受信が完了



13デスクトップにCSVファイルが作成されます。 ※マイドキュメントに選択・保存する事も可能です。

SDL30	322	14397	JOB15	0	1 05		
1	1	0	1	1	7.52	1.5303	10
2	2	0	1	2	10.89	1.533	9.9973
3	3	0	1	2	8.87	1.5308	9.9995
4	4	0	1	2	28.62	1.5285	10.0018
5	5	0	1	2	49	1.5295	10.0008
6	5	0	1	1	54.12	1.4371	10.0008
7	6	0	1	2	26.92	1.4393	9.9986
8	7	0	1	2	14.39	1.4362	10.0017
9	8	0	1	2	7.02	1.4384	9.9995
10	9	0	1	2	28.97	1.4317	10.0062
11	10	0	1	2	45.69	1.4367	10.0012
12	11	0	1	2	65.67	1.4356	10.0023
13	11	0	1	1	7.72	1.4699	10.0023

⑭完成